



landal
Holiday breaks in nature

Orka Lodges – Heating Instructions

1. Make sure all switches on the radiators in each room are turned on.
2. Turn on the digital thermostat located near the front door on the wall.
3. A circled number **1** should be showing. If not:
 - a. Press the **clock button** (bottom row, centre) **three times** until the current circled number flashes.
 - b. Press the **down arrow** (bottom right) to change it to **1**.
 - c. Press the button with **four boxes** (bottom row, second from left).
4. Set your desired temperature. *Note: Lodges are well-insulated and take time to reach the new temperature.*
5. Your set temperature will flash, then the display will revert back to the current temperature. It will change gradually.
6. Touch the house/chimney icon on the display. Smoke will appear to confirm heating is on for all radiators.
7. All radiators are now on continuously. Use the dial on each radiator to adjust.
8. **Important: None of our Orka units has air conditioning.**
9. **Important: Please do not turn off the hot water switches or water will run cold.**

Black Cabins – Heating Instructions

1. Ensure the digital thermostat in each room is switched on. All heaters are on the ceiling.
2. The display should show **MAN**, not **PROG**.
3. If it shows **PROG**, press the **PRG button once** to change to **MAN** (manual over-ride).
4. Set your desired temperature. *Note: Cabins take time to reach the new temperature.*
5. Your set temperature will flash, then the display will show the current room temperature.
6. Keep the thermostat on **MANUAL** at all times. Adjust the temperature on each room's digital thermostat for comfort.
7. **Important: None of our black Cabins has air conditioning.**
8. **Important: Please do not turn off the hot water switches or water will run cold.**